


INSTRUCTIONS


ECO

CODING THE REMOTE TO MOTOR

1. Press 'CODE' button and hold on until the LED dot displays then immediately release.

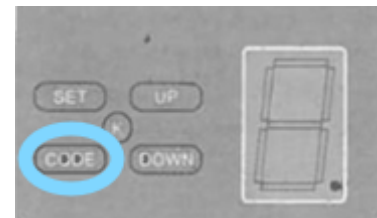

2. Then press any button on the remote once, the dot will turn off; press the button on the remote again and the dot will fast flash, then the LED displays '| |'. The remote should now be set.

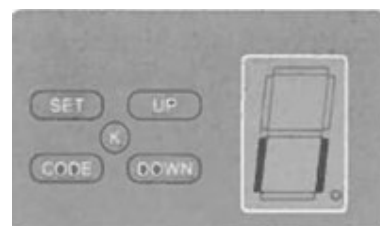

DELETING ALL CODED REMOTES

1. Press 'CODE' button for more than 8 seconds until the LED displays 'C'. All stored remotes should now be deleted.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

