

REMOTE PRO

PROGRAMMING INSTRUCTIONS



4D DOORS RC01

PROGRAMME YOUR NEW REMOTE TO YOUR 4DS2 MOTOR

1. Take the cover (lid) off the motor.
2. Press and release the code button once. The red dot in the corner of the display will light up.
3. Press and release any button on your new remote. The red dot in the corner of the display will turn off.
4. Press and release the same button on your remote again. The red dot and the LED light on the motor will flash.
5. Test your remote.

DELETING THE MOTOR MEMORY

1. Press and hold the 'Code' button until C is indicated on the display. All stored remotes will be deleted.
2. Test your original remote. It should not operate the motor.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

