

# REMOTE PRO


## PROGRAMMING INSTRUCTIONS



### STEEL-LINE RC02/SD1000

#### PROGRAMMING REMOTES

1. Press the CODE button (circled in blue below) once and immediately let go and a dot will appear in the corner.
2. Give a two second press of any button on the new remote that you want to program into the motor twice.
3. The dot will go out then begin to flash on the second press which indicates a successful code.
4. Repeat this procedure to code additional remotes.
5. Test remotes.

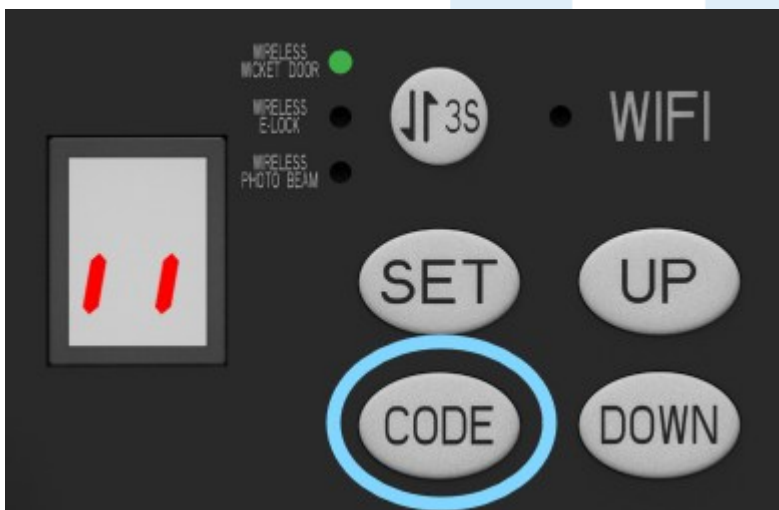

#### DELETING REMOTES

To delete all remotes from the motor at once, simply press and hold the CODE button on the motor and do not let go until the letter C is displayed on the screen which indicates all remotes are removed from the motor.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

