

REMOTE PRO

PROGRAMMING INSTRUCTIONS



ACCENT CAD603

1. Remove your original remotes battery cover to reveal 9 little switches
2. Unscrew the back of the new remote to reveal the same 9 switches
3. Change the new remotes switches to match the old remote
4. Close both remotes and test



WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

