

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS




### ACDC

#### ROLLER-GLIDE

##### Coding Remotes:

1. Remove the white plastic light diffuser - Beware of connected Push button attached.
2. Press once and immediately release LEARN button (circled in orange) - A dot will be indicated in the corner of the LED display.
3. Press the button on the remote you wish to operate this door for 2 seconds.
4. Pause for 2 seconds.
5. Press the same button again for 2 seconds.

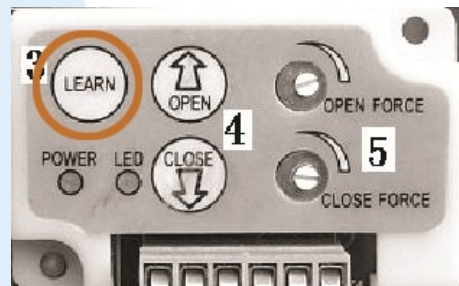

#### POWER-GLIDE, EURO-GLIDE & RAPTOR

##### Coding Remotes:

1. Press once and immediately release LEARN or CODE button (circled in orange) - A dot will be indicated in the corner of the LED display.
2. Press the button on the remote you wish to operate this door for 2 seconds.
3. Pause for 2 seconds.
4. Press the same button again for 2 seconds.
5. The dot in the corner of the display will flash to confirm the code and then turn off.
6. Repeat this process for additional remotes that need to be stored and test.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



# REMOTE PRO


## PROGRAMMING INSTRUCTIONS



### SLIM-GLIDE

#### Coding Remotes:

1. Remove the light diffuser cover.
2. Press K1 button on the control board (circled in orange) once and immediately let go, the coding light will come on.
3. Press the button on the remote you wish to operate this door for 2 seconds and the coding light will turn off.
4. Pause for 2 seconds.
5. Press the same button on the remote again for 2 seconds.
6. The coding light will flash then turn off indicating the transmitter has been coded successfully.
7. Repeat the procedure for additional remote control transmitters and test.

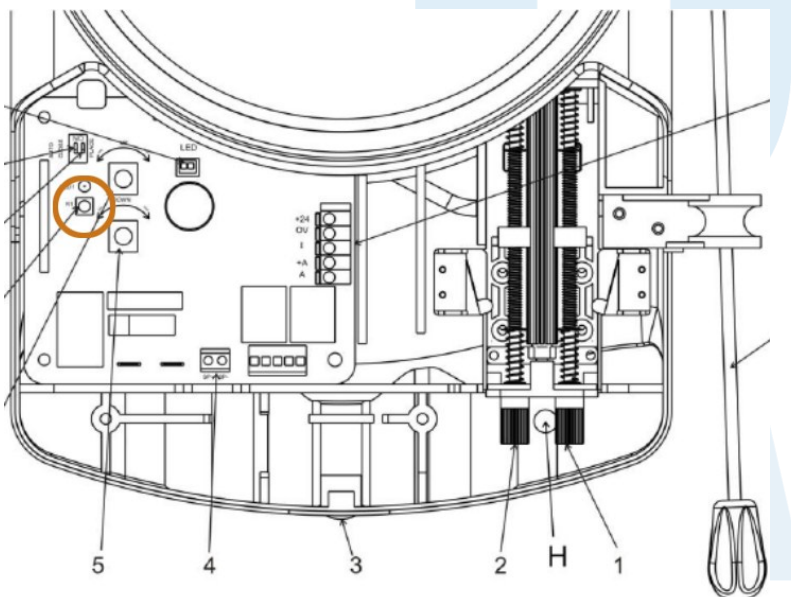

#### Deleting Remotes:

1. To delete all codes, press and hold button K1 down for approximately 8-10 seconds. The code light will come on and then go off confirming deletion.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### ACDC GL24

#### Coding Remotes:

1. Press and hold down button "P2" MEMO: The LED "L4" will flash slowly.
2. At the same time activate the remote button which is to be coded.
3. Hold down button "P2" MEMO until LED "L4" starts to flash gain.
4. Release the button "P2" MEMO: The LED will continue to flash.
5. Within 15 seconds activate the remote button again.

**NOTE:** Same transmitter, same button; if the button is different or it is a different remote the coding attempt will abort without success

**End of coding:** the LED "L4" will remain lit for 2 seconds, indicating that the remote button has been correctly coded

**NOTE:** It is not possible to code a button which is already in memory: if you attempt this, the LED will switch off when you activate the button. Only after releasing the button "P2"MEMO will you be able to continue the coding procedure.

#### Deleting All Remotes:

1. Keep both buttons pressed down ("P2+P3") for more than four seconds.
2. LED "L4" will remain lit during the entire delete time (about 8 seconds).
3. LED "L4" switches off when the cancellation procedure has terminated

**NOTE:** When the memory is almost full the time required to search for a user code could take up to 1 second from when the command was received. If led "L4" remains lit memory is completely full. To code a new remote you will first have to cancel a code from memory.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

