REMOTE PRO

PROGRAMMING INSTRUCTIONS




CODING A KEYPAD TO AN ATA GARAGE MOTOR


Some garage motors have a plastic cover over the buttons. If yours does, remove it. Locate either the "MODE" or "DOOR CODE" button on the motor, as shown below. Follow the instructions based on which button your motor has.

OR

Option 1

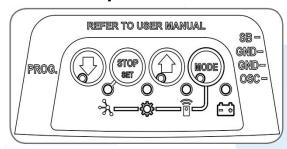

Option 2

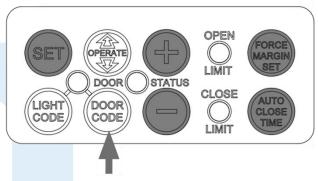

OPTION 1: MOTORS WITH A "MODE" BUTTON

- 1. Press and release the "MODE" button on the motor repeatedly until the LED on the transmitter lights up
- 2. Press and hold the blue down arrow button on the motor until Step 5
- 3. On the transmitter, press and hold button 1 for 2 seconds
- 4. Press and hold button 1 again for 2 seconds
- 5. Release the blue down arrow button on the motor
- 6. Press and release the "MODE" button on the motor

OPTION 2: MOTORS WITH A "DOOR CODE" BUTTON

- 1. Press and hold the "DOOR CODE" button on the motor until Step 4
- 2. Press and hold button 1 on the remote for 2 seconds
- 3. Press and hold button 1 again for 2 seconds
- 4. Release the "DOOR CODE" button on the motor



REMOTE PRO

PROGRAMMING INSTRUCTIONS



CREATING YOUR OWN PIN

- 1. Press and hold the "FCN" button. The keypad will beep and flash to indicate that it is in learning mode. Release the button.
- 2. Enter in your new 4-digit user PIN code and press the "FCN" button.
- 3. Re-enter the same 4-digit user PIN code and press the "FCN" button.
- 4. The keypad will flash and beep to indicate that it is exiting learning mode.

