

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### AUTO OPENER AOTX

#### PROGRAMMING A REMOTE VIA THE MOTOR

1. Remove the light/button cover (sectional/overhead motor) or the screw at the base of the motor (Door Master/Roller motor model only) to reveal the CODE button on the motor.
2. Press and hold the CODE button on the motor until a small red dot appears in the bottom right corner of the motor display and let go of CODE immediately.
3. Immediately press and hold the button on the new remote once, let go of the remote button and press the same button a second time.
4. Test the remote.

#### DELETING ALL REMOTES FROM THE MOTOR

1. Remove the light/button cover (sectional/overhead motor) or the screw at the base of the motor (Door Master/Roller motor model only) to reveal the CODE button on the motor.
2. Press and hold the CODE button on the motor until a small red dot appears in the bottom right corner of the motor display and continue holding down the CODE button until the red dot goes out.
3. Test a working remote to ensure it is no longer working which will indicate that all remotes, including any lost or stolen remotes have been removed from the motor memory.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

