

REMOTE PRO


PROGRAMMING INSTRUCTIONS



BFT COMPATIBLE REMOTES

DEIMOS SLIDER & THALIA CONTROL BOARDS

You control board has a LCD display with 3 buttons

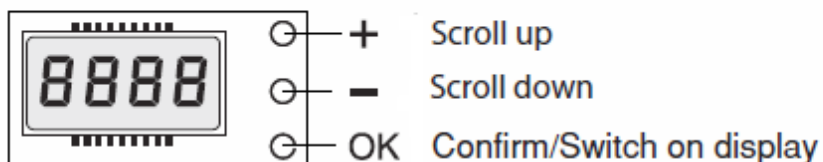

1. Press the OK button 4 times and the screen will display 'Paran'.
2. Press the middle button (-) twice and the screen will display 'Radio'.
3. Press the OK button twice and the screen will display 'Hidden Button'.
4. Press the bottom 2 buttons on the remotes simultaneously and the screen will display 'Release'.
5. Now release the 2 buttons.
6. Press any buttons on your new remote which you would like to operate your gate for 2 seconds.
7. Press the + and – buttons on the control board together 4 times to exit the programming mode.
8. Test your remote.

PROGRAMMING YOUR REMOTE TO YOUR NON-LED SCREEN CONTROL BOARD

1. Press S1 on the control board on your gate motor. The green light on the control board will turn on.
2. Press the 2 bottom buttons simultaneously. The green light will be solid.
3. Press the top left button. The LED light will flash rapidly for about 5 seconds.
4. Test your remote.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



REMOTE PRO

PROGRAMMING INSTRUCTIONS



PROGRAMMING YOUR NEW REMOTE VIA YOUR ORIGINAL REMOTE

1. Press and hold the two top buttons on your original working remote simultaneously until the red LED light turns on the remote.



2. Release both buttons on the original remote.

Please note: If your door begins moving during this process, stop the door with your original remote and start again. The reason the door is moving is because you are not pressing the two top buttons at the exact same time.

3. Press and hold the button on your original remote that operates your door currently.
4. Let go of the button on your original remote.
5. Press and hold both buttons 3 and 4 on the new remote at the same time and let go after 3 seconds.



6. Press for one second and let go of the button on the new remote that you would like to program to operate your door.
7. Wait 60 seconds and test your remote.

Instructional Video

Please follow the link below to view an instructional video:

<https://youtu.be/aWeQOGncOkI>

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

