

REMOTE PRO

PROGRAMMING INSTRUCTIONS



PROGRAMMING YOUR NEW PRE-CODED REMOTE TO YOUR ROLLER DOOR MOTOR

1. Remove the cover off the motor wall panel to expose the receiver.
2. Locate the receiver as per the image below.



3. Remove the receiver from the wall panel to expose the backside and gain access to the SW1 button circled below.



4. Press and hold the 'SW1' button the receiver shown above until the amber light comes on.
5. Within 3 seconds, press and hold the desired button on your new remote until the green light on the receiver turns on.
6. Wait 15 seconds for the receiver to time out (this will be indicated by the green light turning off and the red light turning on).
7. Test your remote.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

