
REMOTE PRO

PROGRAMMING INSTRUCTIONS



D2 TURBO

PROGRAMMING YOUR NEW REMOTE TO YOUR D2 TURBO MOTOR

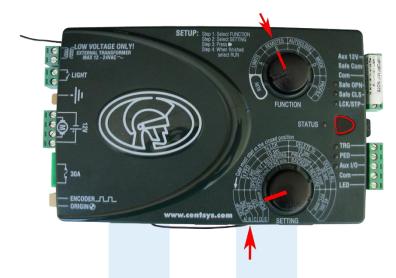

- 1. Rotate the Function Dial to REMOTES position (B), as shown above.
- 2. Rotate the Setting Dial to the "Tx TRG" selection along the 'B' row of options.
- 3. Press the pushbutton (highlighted in red above) to select the "TX TRG" setting. The Status LED light will change from red to green to confirm the setting.
- 4. Press any button on your new remote that you wish to operate your motor. The Status LED light will flash twice indicating that the onboard receiver has learned in the remote. The onboard buzzer will also pulse twice.
- 5. Return the Function Dial to the RUN position.
- 6. Test your new remote.

