

REMOTE PRO


PROGRAMMING INSTRUCTIONS



D5 EVO

PROGRAMMING YOUR NEW REMOTE TO YOUR D5 EVO MOTOR

1. Press the 'Go' button once and release.
2. Press the 'Go' button again for 2 seconds.
3. Press the top arrow button until you see "Remote Controls (TX)" on the screen.
4. Press the 'Go' button once, you will see "Add Remote".
5. Press the 'Go' button again, you will see "Select Function Trigger Gate".
6. Press "Go" button again, you will see "Time Bar Remote?".
7. Press "Go" button again, you will see "Press Remote Button".
8. Press a button on your new remote for 2 seconds and release. The screen will display "Success".
9. Press the Exit button twice to exit programming mode.
10. Test your new remote.

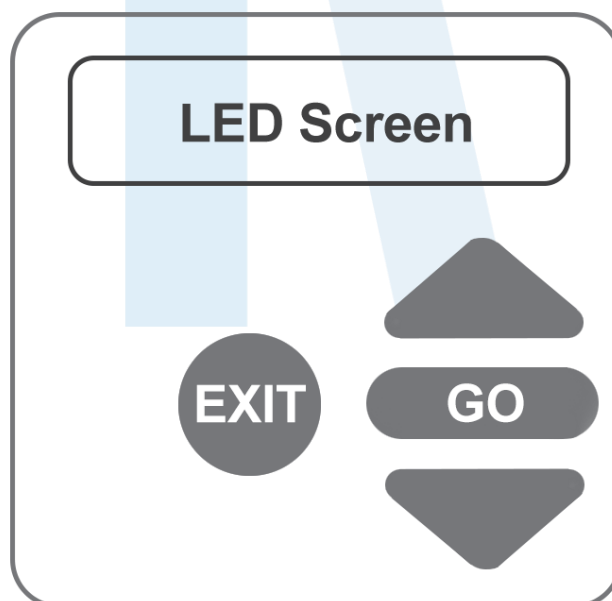

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

