

REMOTE PRO

PROGRAMMING INSTRUCTIONS



CENTURION

PROGRAMMING A NEW REMOTE

1. Press and immediately release the red learn button. The screen will now display 'bu'.
2. Press and immediately release the blue minus button. The screen will now display 'ru'.
3. Press and hold any button on your new remote until the light on the motor strobes.
4. Wait 5 seconds and test your remote.



WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

