

REMOTE PRO


PROGRAMMING INSTRUCTIONS



CODE EZY MERLIN M842

SETTING THE REMOTE FREQUENCY

1. Hold buttons **3 & 4** at the exact same time. The LED light will go solid.
2. Release Button Number **4**.
3. Press Button Number **2** three times. The LED light will flash three times.
4. Release Button Number **3**.

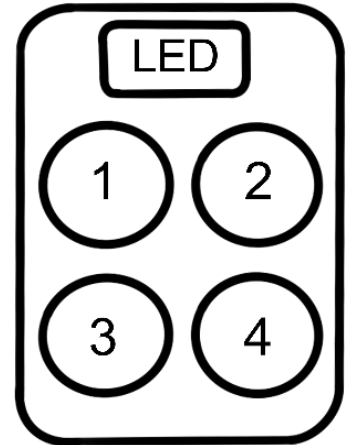

LOCATING THE LEARN BUTTON ON MOTOR

On overhead door openers:

- With five exposed terminal screws at the rear
 - Remove the small black cover to the right of the terminal screws
 - Learn is the RED button under the black cover
- Learn is the RED button under the black cover
 - Learn is the RED button under the black cover
 - Find the small button marked "Learn"
- With four covered terminal screws at the rear, and a Merlin wired wall switch
 - The small button on the Merlin wall switch is the Learn button

On roller door openers:

- Single small square RED button on the front
 - Remove the lamp cover; remove the small black cover to the left of the lamp holder
 - Learn button is the RED button under the black cover

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



REMOTE PRO

PROGRAMMING INSTRUCTIONS



- Large RED or GREEN push switch on front
 - Remove the RED or GREEN control panel cover
 - Find the small button marked “Learn”
- Large RED or GREEN push switch on front and a Merlin wired wall switch
 - The small button on the Merlin wall switch is the Learn button

On other receivers:

- Dark grey boxed receiver with a large round GREEN button
 - The Learn button is the small DARK GREY button inside the GREEN button
- Gate receiver cards
 - The Learn button is the tact switch on the PCB marked “Learn”
- Others
 - See your receiver’s user guide, or inspect and find a button marked “Learn”

PROGRAMMING THE NEW REMOTE TO THE OPENER OR RECEIVER

1. Press and hold the Learn button for 1 to 2 seconds
2. Press the desired button on the remote control which you want to operate the door twice

Programming the remote to control the lamp on your opener (if fitted):

3. Press the desired button for the secondary function
4. Press and hold the Learn button for 1-2 seconds
5. Press the desired remote control button once for the main function (open door)
6. Press the desired remote control button once for the secondary function (control lamp)

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

