

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### CSI

#### PROGRAMMING YOUR NEW REMOTE TO YOUR CSI MOTOR

1. Please note, remotes that have been supplied with the door opener are pre-programmed.
2. Press the 'CODE' button once. A dot will be indicated in the corner of the display.
3. Now press the button on the remote you wish to operate your door for 2 seconds.
4. Press the same button again for 2 seconds. The dot on the display will flash to confirm the code, then turn off.
5. Test your remote.

#### DELETING REMOTES

1. Press and hold the 'CODE' button until a C is indicated on the display. All stored remotes will be deleted.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

