


REMOTE PRO

PROGRAMMING INSTRUCTIONS



DACE DURATRONIC / EXO

1. Press and hold the button on the new remote
2. Remove the jumper (outline in red)
3. Place the jumper over the two pins (outline in blue) on the control board called TX-L for 2 seconds
4. Remove the jumper from the two pins and place back on one single pin (outlined in red)
5. Release the button on the remote
6. Test the remote
7. Repeat the steps for any additional remotes

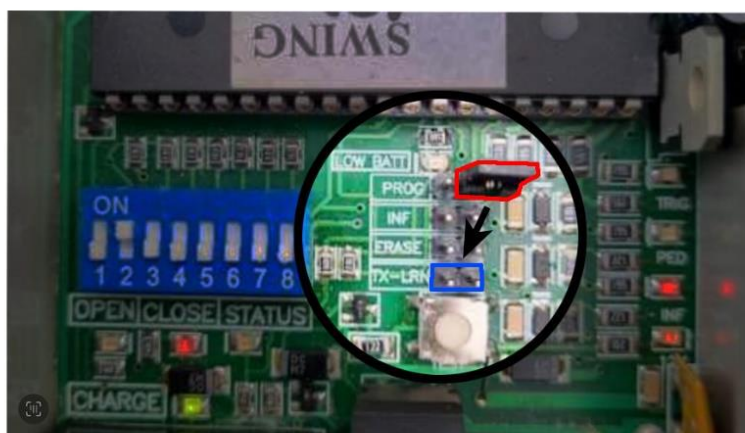

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

