

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### DEA DIGIRAD

#### MEMORISATION ON DEA SYSTEM DEVICES

DIGIRAD N has four pre-set access codes for quick programming control units or receivers:

- 1111: Activates CH1
- 2222: Activates CH2
- 3333: Activates CH3
- 4444: Activates CH4

To program the default codes:

1. Set the DEA SYSTEM device to radio learning mode (e.g., P005 on RR, rA.02 on NET-EVO, or P1 on receivers).
2. Press any key to activate DIGIRAD N (red and white LEDs will blink).
3. Enter the code matching the desired radio channel.
4. Return the control unit or receiver to normal mode, then confirm the command works by typing the memorized code on the keypad.

For security, it is recommended to replace the default codes after pairing.

#### ACCESSING PROGRAMMING MODE

To enter programming mode:

1. Press any key to wake DIGIRAD N.
2. Hold keys 1 and 3 for 5 seconds until a continuous beep sounds, then release.
3. The white LED will light steadily, indicating programming mode.
4. Type in your new code. Then press E to confirm or C to cancel/return.

If the red and green LEDs also blink, an installer code is required. Enter it within 15 seconds and confirm with E. If not entered, the keypad will return to stand-by.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

