

REMOTE PRO

PROGRAMMING INSTRUCTIONS




DEA ZIGGY GT2/GT4

PROGRAMMING INTO A RECEIVER WITH NO LCD SCREEN

1. Open the casing of your receiver box. This can be found next to your motor.
2. Press and release the programming button on the circuit board (button ENR, MEMO, PROG, or RESET, depending on the model).
3. The LED light on the receiver will light up or blink.
4. Press a button on your new remote for 1 second.
5. Release the button. The LED light on the receiver will go out immediately or in the following 10 seconds depending on the model of your motor.
6. Test your remote

PROGRAMMING INTO A RECEIVER WITH A DIGITAL SCREEN

1. Open the casing of your receiver box. This can be found next to your motor.
2. Press the buttons + or – on the receiver circuit box until you see the entry P005 on the digital screen.
3. Press OK, the LED will light up.
4. Press a button on your new remote for 1 second.
5. Wait 10 seconds.
6. Test your remote.

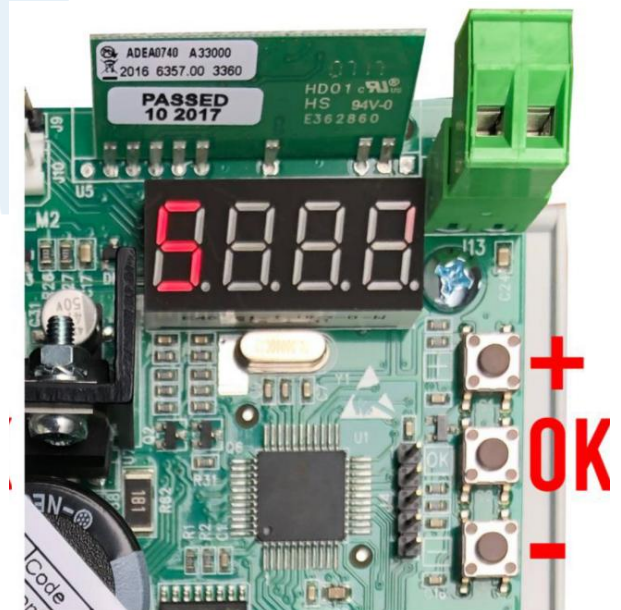

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

