

REMOTE PRO



PROGRAMMING INSTRUCTIONS



DITEC

PROGRAMMING A REMOTE DIRECTLY TO THE MOTOR WITH DISPLAY SCREEN

1. Remove the cover of the sliding gate motor or the wall control box of a swing motor to access the control board of the motor.
2. Locate the screen and buttons which will look like the examples below:

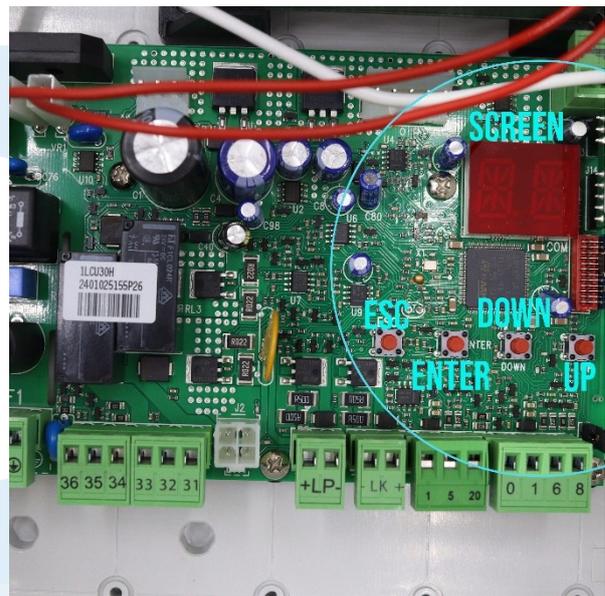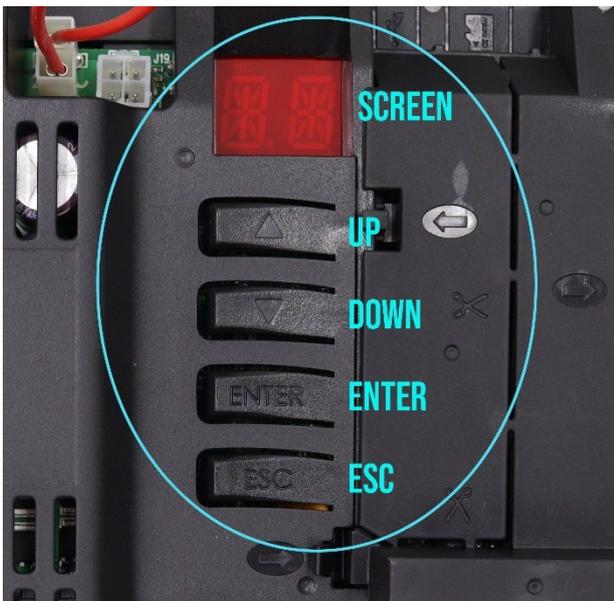

3. Using the UP button, press and release this button multiple times which will cycle through the menu until the screen displays RO.



4. Press the ENTER button on the motor once and let go and the screen will display SR if SR is not displayed, press the UP arrow multiple times until SR is displayed.



5. Press the ENTER button on the motor once and SR will begin to flash.
6. Immediately press and hold a button on the new remote you would like to program for 3 seconds until the screen on the motor displays OK which indicates the remote has been successfully programmed.
7. The screen will then go back to SR, if there are additional remote to program, start again from Step 5. If no additional remotes are required to be coded, press ESC button on the motor three times, close the lid of the motor and test.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



REMOTE PRO

PROGRAMMING INSTRUCTIONS



PROGRAMMING A REMOTE DIRECTLY THROUGH TO A RECEIVER OR MOTOR WITHOUT DISPLAY SCREEN

1. Open the control box and locate the receiver and learn button.
2. Press the black or red PRG button for 3-5 seconds until an led illuminates then immediately let go.
3. Press the button on the new remote you wish to activate the device for 2 seconds.
4. Wait for 10 seconds for receiver led to switch off and test the new remote.

DELETING CODES FROM MEMORY

1. Press the little black program button (inside MOTOR BOX) until seeing the red light flashing slowly and release.
2. Press the button again until you see the light flashing fast. Then release.
3. Wait 10 seconds, then test.
4. Repeat for the garage door if fitted. The program button for garage should be in a ADD-ON receiver.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

