

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### DITEC CS12E

#### PROGRAM YOUR NEW REMOTE INTO YOUR DITEC CS12E CONTROL BOARD

1. Press and release the "ENTER" button on the motor and the screen will display "AT".
2. Press the up arrow or down arrow until the screen displays "RO" and then press "ENTER".
3. The screen should then display "SR" (if "SR" is not displayed, press the up arrow or down arrow until it does).
4. Press "ENTER" and "SR" will begin flashing.
5. Press and hold the button on the remote for 2 seconds and the screen will display "OK" briefly before going back to "SR".
6. Press the "ESC" button to return to exit out of programming.
7. Test the remote.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

