

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### DOORWORKS

#### PROGRAMMING YOUR NEW REMOTE

1. Push and hold the “P” (circled in green) and “+” (circled in purple) buttons located on the motor at the same time until the LED 7 (circled in blue) on the motor flashes, then let go of both buttons.
2. Push “+” (circled in purple) once on the motor and immediately let go once LED 7 (circled in blue) is on and the rest of the lights go out (generally takes 1-2 seconds).
3. Press any button on the new remote twice that you wish to code to the door, LED 7 (circled in blue) on the motor will flash - If more remotes are to be programmed, repeat steps 2 and 3.
4. Push “P” (circled in green) once and immediately let go on the motor to end setup.

#### Notes:

- A total of 6 remotes maximum can be coded to the motor at one time.
- If more than 6 remotes are coded the oldest remote will be deleted.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

