

REMOTE PRO

PROGRAMMING INSTRUCTIONS



ELSEMA

Programming an RPC452 from an Elsema FMT-302DA

These steps apply to the **FMT-302DA dual-access remote**, not the standard FMT-302. Use an original remote that already operates the entry you want to copy.

Before starting: Open the remote by removing the screw at the back and removing the back cover. Locate the numbered DIP switches in both remotes. Use each switch block's **ON marking** to identify ON and OFF - don't rely on whether the switches point up or down. Leave the original remote's settings unchanged.

Option 1: Copy the main-entry button

1. On the new remote, match switches **1-4** to switches **1-4** on the original working FMT-302DA.
2. Set the new remote switches **5-12 all OFF**, regardless of their positions on the original remote.
3. With the gate area clear, press the new remote button and check that the main entry operates.

Option 2: Copy the private-entry button

1. On the RPC452, match **all 12 switches** from the old remote to the new remote.
2. Match each switch by its number and ON/OFF setting.
3. With the door or gate area clear, press the button on the new remote and check that the private entry operates.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

