

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### FADINI

#### PROGRAMMING THE FADINI DIVO TO A FADINI RECEIVER

This remote is pre-configured to Fadini Astro by the manufacturer. You can check the current mode by pressing and holding the bottom two buttons until the red LED flashes:

- 1 Flash = Astro 43
- 3 Flashes = Jubi 433

To switch from Fadini Astro to Fadini Jubi, follow these steps:

1. Press and hold the top right and bottom right buttons (buttons 1 and 4) simultaneously for 5 seconds.
2. The remote will flash to confirm the mode change:
  - 1 Flash = Astro 43
  - 3 Flashes = Jubi 433

**Warning:** Holding the programming button on your opener for more than 5 seconds may erase all remotes currently programmed to the receiver. If this happens, you'll need to reprogram all remotes.

1. Locate and open the receiver to expose the programming button.
2. Press the programming button on the receiver (usually labelled ENR, MEMO, PROG, or REC). You may need to hold it for a few seconds. The LED on the receiver will light up or flash, indicating it's in learning mode.
3. Press and hold the button on your Divo remote for 1 second.
4. The light on the receiver should turn off within 10 seconds, confirming successful programming.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

