

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### G-FORCE

1. Open the original working remote (may be located under the battery cover or you may need to remove the screws at the back of the remote).  
  
Please note: If you do not have an original remote you will need to locate the DIP switches on the motor or receiver.
2. Open the new remote (may be located under the battery cover or you may need to remove the screws at the back of the remote).
3. Change the DIP switches in the new remote, by moving these up or down to match the switches in either your old remote or your motor.
4. Close the remotes and test.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

