## **REMOTE PRO**

### PROGRAMMING INSTRUCTIONS



### **GLIDEROL**

#### **GLIDERMATIC GTS**

- 1. Remove the light cover from the motor.
- 2. Locate the remote programming button on the motor's circuit board. Please refer to the images below for a guide.
- 3. Press the program button on the motor once and immediately release this button. A red light will illuminate. If the red light does not illuminate beside the button you have just pushed then this is the wrong button.
- 4. In less than 5 seconds, push and hold button A or button 1 on the new remote.
- 5. The red light will go out and the remote is coded.





Please refer to the next page for Gliderol GRD motors.

# **REMOTE PRO**

#### PROGRAMMING INSTRUCTIONS



#### GLIDEROL GRD

- 1. Remove the cover from the motor wall unit.
- 2. Locate the remote programming button on the motor's circuit board. Please refer to the images below for a guide.
- 3. Press the program button on the motor once and immediately release this button. A red light will illuminate. If the red light does not illuminate beside the button you have just pushed then this is the wrong button.
- 4. In less than 5 seconds, push and hold button A or button 1 on the new remote
- 5. The red light will go out and the remote is coded.

Please note that if you have more than one motor. You will need to use button A or button 1 for all motors. The motor will determine which button on the remote will operate the door.





