

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### KING GATES WIRELESS KEYPAD

#### PAIR FACTORY DEFAULT CODES

This unit has up to 3 different opening codes. For the first time, use the factory default codes of the unit. The 3 codes, one for each of the letters. are:

- 1-1-A
- 2-2-B
- 3-3-C

It is best to try to change Code C first

1. Press and hold the 'Radio' button until you see the 'Radio' light turns on.
2. Add the default codes one by one: "1-1-A" – "2-2-B" – "3-3-C"
3. Tap the 'Radio' button to finish the pairing.
4. Test the default codes. Your motor will begin to move.

#### PROGRAMMING A PERSONAL SECURITY CODE INSTEAD OF THE DEFAULT CODES

1. Press and hold the "0" button
2. While still pressing the "0" button, press the "A" button for 2 seconds, hold the "0" button for another second and release.
3. Put in the factory code: 3-3-C
4. Put in your new personal code (e.g. 2-0-0-1-C)
5. Put in your new code again (e.g. 2-0-0-1-C)
6. Repeat to change the other factory codes to your personal codes.
7. Test your codes once complete.

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

