

# REMOTE PRO


## PROGRAMMING INSTRUCTIONS



### LEB SMARTY

#### CTR57 BOARD

1. Press once and immediately release the CODES button on the board (circled in purple).
2. Press any button on the new remote two times.
3. Test the remote.

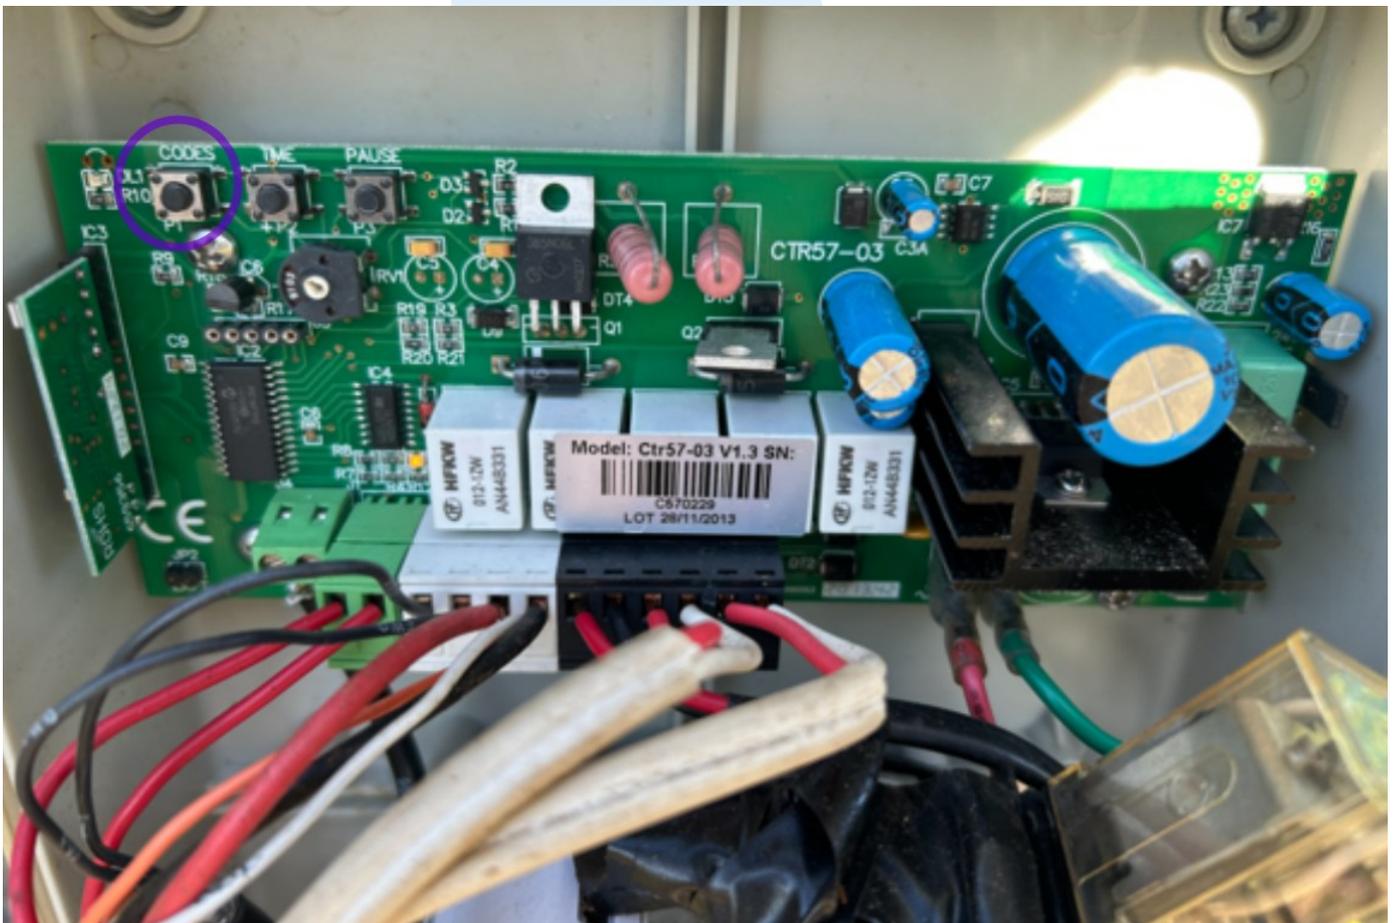

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

