

REMOTE PRO

PROGRAMMING INSTRUCTIONS



LEXO

PROGRAMMING TO A LEXO RD1P1000A/ RD1P1800A ROLLER DOOR:

1. Press and release the 'Code' button on the motor. The LED light will illuminate.
2. Press any button you wish to operate the motor on your new remote once until the LED light turns off.
3. Press the same button on your new remote again. The LED light will flash 8 times before returning to standby mode.
4. Deleting ALL the remotes
5. Press and hold the "CODE" button on the motor for more than 8 seconds until the LED display flashes "C".

PROGRAMMING TO A POWERTECH COBBLE OVERHEAD, SLIDING GATE OR SWING GATE

1. Press "RF Learn" button on the motor for 3seconds, LED display shows "CS"
2. Press any button you wish to activate the motor once; LED display will blink three times then turn off after approximately 7 seconds.
3. Cobble: RF button is found inside the Light Fixture
4. Gate: RF button is found on the control board below the LED display

DELETING ALL THE REMOTES

1. Press and hold the "RF Learn" button until the right LED lights up and then turns off, LED display shows "C".

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

