








REMOTE PRO

PROGRAMMING INSTRUCTIONS



MARANTEC

PROGRAMMING A MASTER REMOTE

1. The opener must be switched on. 
2. Hold the P button until you see this symbol flashing. 
3. Press and release the P button again. This icon will flash. 
4. Press and release the P button. This WIFI icon will flash. 
5. Press any button on your remote. The WIFI icon will be solid. 
6. Release the button on your remote. The WIFI icon will flash. 
7. Press and release the P button to save and end programming. A solid ON icon will be displayed. 

PROGRAMMING REMOTE TO REMOTE

1. Insert the three-pin connector into the right side of the working original remote (there will be three holes on the remote). Please note to insert the pins carefully to ensure they remain straight and aligned.
2. Insert the other side of the connector into the left side of the new remote.
3. Press and hold the button on the original/old remote that currently operates the door and do not let go – It is very important to ensure you are pressing the old remote first.
4. Press and hold any button on the new remote (at this point you will be holding one button on both remotes)
5. If the new remote flashes rapidly then goes solid, the remote is programmed. If you simply get an immediate solid light then the remotes are not connecting to each other and you must check the pins to ensure they are straight and fully inserted.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

