

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS

R


### MYHOUSE/NICEHOME

#### PROGRAMME YOUR NEW REMOTE TO YOUR MOTOR


1. Remove the cover of your motor (sliding gates) or wall box cover (swing gates).
2. Press once and immediately release the learn button (circled in orange below) on the motor. The location will vary depending on your board model.
3. Within 10 seconds press and hold any button on the new remote for approximately 5 seconds and then let go.
4. Wait 60 seconds and then test the remote.



CL101

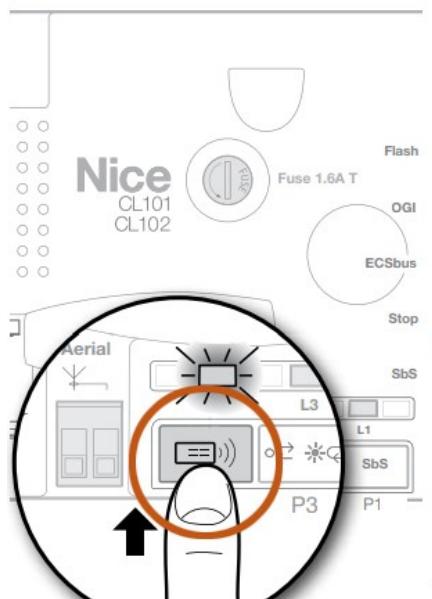

CL201/2/3/4/5

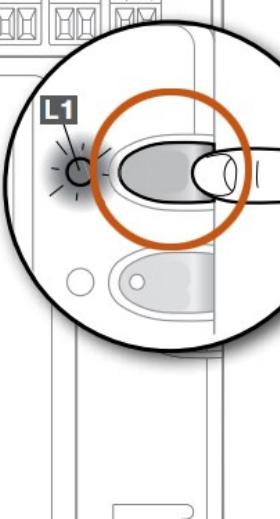

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

