

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS




### MOOVO

1. Open the cover of the swing arm to reveal the P1 button
2. Press the P1 button once and release and a green LED will begin to flash once each second
3. Press and hold the button on the new remote you wish to program and keep it held down until the green P1 LED emits three long flashes
4. Wait 5-10 seconds for the motor to exit learn mode. The LED will flash red when it is out of learn mode
5. Test the remote which will now be programmed

### VIDEO INSTRUCTIONS

[https://youtu.be/kW\\_cae9fjI0](https://youtu.be/kW_cae9fjI0)

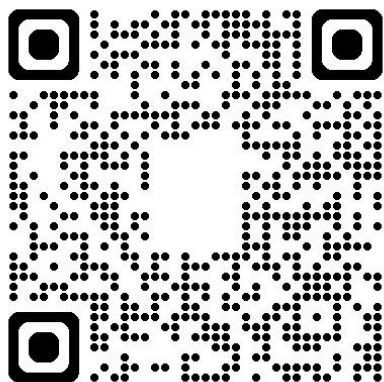

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

