REMOTE PRO

PROGRAMMING INSTRUCTIONS



NOVA KEYPAD

1. Remove the back casing of the keypad by inserting a small flat screwdriver at the base of the keypad

Instructions		Indicator LEDs
Press the * button followed by the default master code (1 2 3 4). Press the * again.		
Press the '0' button and the '#' bu	utton	
Press on button number 1 follows	ed by the #	
Enter your 4-digit pin, press #		
Quick guide *1 2 3 4* 0 # 1 # NEW PIN #		

Please note if no action is taking in 5s, the keypad will time out and the lights will turn off, the keypad will beep once, please start from step 1.

PROGRAMMING YOUR NEW REMOTE TO YOUR MOTOR

- 1. Press the 'Go' button once and release.
- 2. Press the 'Go' button again for 2 seconds.
- 3. Press the top arrow button until you see "Remote Controls (TX)" on the screen.
- 4. Press the 'Go' button once, you will see "Add Remote".
- 5. Press the 'Go' button again, you will see "Select Function Trigger Gate".
- 6. Press "Go" button again, you will see "Time Bar Remote?".
- 7. Press "Go" button again, you will see "Press Remote Button".
- 8. Enter your new PIN







REMOTE PRO





- 9. Press a button on your new remote for 2 seconds and release. The screen will display "Success".
- 10. Press the Exit button twice to exit programming mode.
- 11. Test your new keypad by entering your code followed by the #.

