

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### PRASTEL SLIME4E-V2

1. Press the programming button on the receiver. The LED will illuminate to indicate it is in learning mode
2. Press any button on the remote. The LED will flash while learning the new remote. When the LED stops flashing, the remote has been successfully programmed
3. Repeat Step 2 for any additional remotes within 10 seconds of learning the previous remote. Ensure the LED is on and not flashing
4. Wait 10 seconds or press the programming button on the receiver again to exit learning mode. The LED will turn off
5. Test your newly programmed remote

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

