




# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### CODING TO RECEIVER

1. Press the P button (circled in orange) once and immediately let go.
2. Press and hold the button on the new remote for two seconds then let go.
3. If you get 1 short flash on the receiver this indicates the remote has been programmed if you get 3 long flashes it means your memory is full.
4. Wait until you get 4 long flashes (after 10 seconds) which indicates the receiver has exited learn mode.
5. Test the new remote.

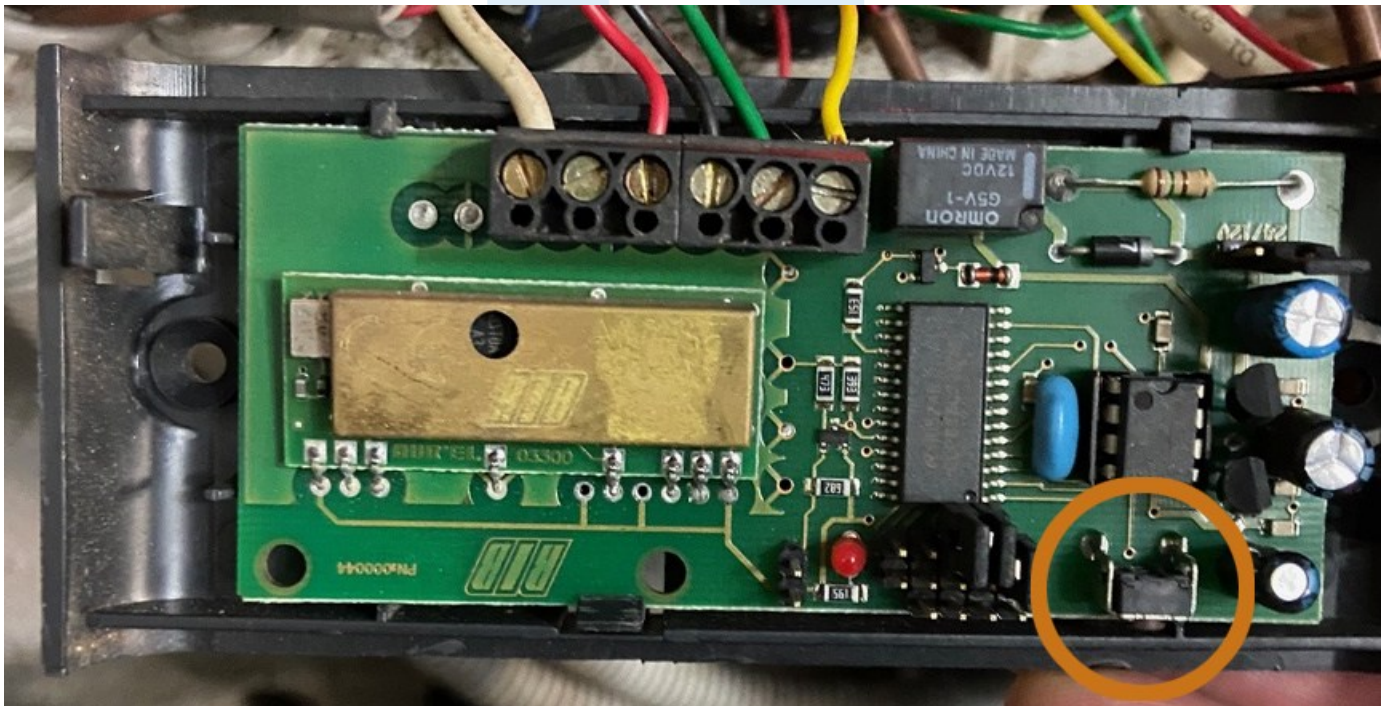

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

