

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS

---



### RICHMOND

#### PROGRAMMING YOUR NEW REMOTE TO YOUR RICHMOND MOTOR

1. Press and release the learn button (S1 or K4) once the LED light on the motor flashes.
2. While the light is on, press your desired button on your new remote for 2 seconds and release.
3. Press the same button on your new remote again for 2 seconds.
4. Test your new remote.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

