

REMOTE PRO

PROGRAMMING INSTRUCTIONS



SEA

CODING DIRECTLY TO MOTOR

1. Remove cover of motor to access the motor board which is shown below.
2. Press the UP button on the motor several times until the screen displays TRANSMITTERS.
3. Press and release the OK button on the motor and screen will display START.
4. Press and release the OK button on the motor and screen will display PRESS BUTTON.
5. Press and hold the button on the new remote you would like to program until the screen on the motor displays STORED.
6. Press and release the OK button on the motor and test the remote.



CODING FROM AN EXISTING OPERATIONAL REMOTE (ONLY SUITABLE IF YOUR ORIGINAL REMOTE IS COCCINELLA UNI):

1. Stand within 1 meter of the gate/garage motor.
2. Use a paperclip or something small to press the 'secret coding button' located on the left side of your original working remote and ensure the light on the remote illuminates then release the paperclip.
3. Press once and release the button on the original working remote that currently operates the door.
4. Press and hold the button on the new remote for 3 seconds that you would like to code into the motor and then release.
5. Wait 10 seconds and test the new remote
6. Repeat the above process for any additional new remotes

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



REMOTE PRO

PROGRAMMING INSTRUCTIONS



CHANGING MODES:

PLEASE CHECK THE BACK OF YOUR ORIGINAL REMOTE TO CONFIRM THE MODE REQUIRED – DEFAULT MODE OF NEW REMOTE IS ROLLING CODE

Rolling Code or Rolling Code Plus to Fixed Code: Hold down buttons 3 and 4 on the new remote at the same time until the LED on the remote flashes 3 times (should take approx. 7- 9 seconds) – Your new remote is now in Fixed Code Mode. In this mode the LED stays on when a button is pressed.

Fixed Code to Rolling Code: Hold down buttons 1 and 2 on the new remote at the same time until the LED on the remote flashes 2 times (should take approx. 7-9 seconds) – Your new remote is now in Rolling Code Mode. In this mode the LED flashes slowly when a button is pressed.

Rolling Code to Rolling Code Plus: Hold down buttons 1 and 2 on the new remote at the same time until the LED on the remote flashes 1 time only (should take approx. 7-9 seconds) – Your new remote is now in Rolling Code Plus Mode. In this mode the LED flashes quickly when a button is pressed.

Rolling Code Plus to Rolling Code: Hold down buttons 1 and 2 on the new remote at the same time until the LED on the remote flashes 2 times (should take approx. 7-9 seconds) – Your new remote is now in Rolling Code Mode. In this mode the LED flashes slowly when a button is pressed.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

