

REMOTE PRO

PROGRAMMING INSTRUCTIONS



TAU SLIM

PROGRAMMING REMOTE TO REMOTE

To program your new remote, you must **stand near your motor**.

Original remotes manufactured prior to March 2014

1. On the old remote hold down button 1, then press button 2 – three times.
2. The green LED begin flashing and remain ON for 1 – 2 seconds.
3. Once this happens release both buttons.
4. The green LED flashes to advise that remote programming is activated.
5. On the new remote press the button that you wish to code.

Note: It is recommended to use the same button that is currently used to operate on the old remote (this is to allow this new remote to be used to code other remotes in the future)

Original remotes manufactured after March 2014

1. In the original remote control – press and hold down the button currently used to open your door.
2. The green LED should turn ON, then OFF, and then should start flashing.
3. Release the button once flashing. This remote should now be in Learn Mode.
4. On the New Remote Control, Press the same button as the Original Remote. This remote should now be synced to your opener.

Note: If you are using this remote to control more than one receiver in close proximity – it is recommended that you turn power off to all except the receiver you are currently coding.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



REMOTE PRO

PROGRAMMING INSTRUCTIONS



PROGRAMMING REMOTE TO RECEIVER

1. Push the Learn/Mode/PROG/P1 button on your receiver.
2. Push the button you wish to code on the new remote.

Radio Receiver: When in learning mode LED D1 will turn red and D2 will turn Green. Both will turn off once coded.

D760M Receiver: Red LED will turn off in learning mode. Red LED will pulse and then stay on once coded.

Diamond Receiver: DL8 Led will turn Green in learning mode. LED will turn OFF and then ON to allow for further remotes to be coded. LED will pulse and then turn off.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

