


# REMOTE PRO

## PROGRAMMING INSTRUCTIONS




### TELECO REMOTE TO REMOTE

1. Approach your motor so you are standing a few feet away from it.
2. With a sharply pointed object, press the hidden button P3 behind your already-programmed remote (fig 1). Let it go. The receiver emits a beep.
3. Press the working button on the original remote once and let go.
4. Press the button you wish to program on your new remote control. Let it go. The beep stops and then starts again for 5 seconds.
5. Press the same button on your new remote again until the receiver beeps occasionally.
6. Wait 10 seconds.
7. Your new remote control is programmed.

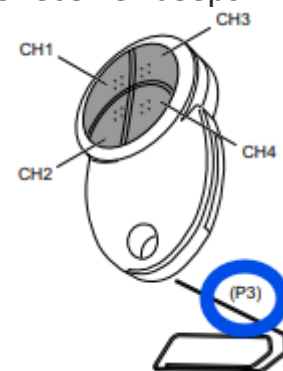

### TELECO REMOTE TO RECEIVER

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button P1 (fig 2). Keep it pressed down. The receiver emits a beep.
3. While keeping the button P1 pressed down, press the button you wish to program on your new remote control. Keep it pressed down. The receiver emits beeps occasionally.
4. Let the buttons go.
5. Wait 10 seconds.
6. Your new remote control is programmed.

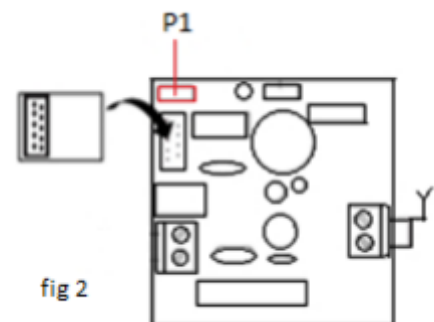

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

