

# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### TILTAMATIC

1. Open the new remote by removing the two screws at the rear.



2. Open your existing remote battery cover to expose the dip switches. If you do not have an existing remote, you must find the dip switches located on the motor which are generally under the side panel.
3. Copy the switch sequence from your old remote to the new one.
4. Close both remotes and test

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

