

REMOTE PRO

PROGRAMMING INSTRUCTIONS



V2 PHOX

PROGRAMMING A REMOTE VIA THE RECEIVER

1. Locate the receiver. This will be wired into your motor.
2. Press the P1 button on the receiver. The L1 LED light will illuminate.
3. Release the P1 button. The L1 LED light will turn off and will show a sequence of single flashings for 5 seconds. This sequence shows the selected channel.
4. **The following step is most likely NOT required** for most users, please continue to step 5. To select the further channels. Press and release the P1 button within 5 seconds. The LED changes type of flashing according to this table.

| Selected Channel | No. of Impulses P1 | Flashing | | | |
|------------------|--------------------|----------|--------|--------|-----------|
| | | Single | Double | Triple | Quadruple |
| Channel 1 | 1 | ▪ | | | |
| Channel 2 | 2 | | ▪ ▪ | | |
| Channel 3 | 3 | | | ▪ ▪ ▪ | |
| Channel 4 | 4 | | | | ▪ ▪ ▪ ▪ |

5. Choose the channel you want to memorize. Within 5 seconds press and hold the button on the remote that you wish to operate the motor.
6. The L1 LED light will turn off and on again. This means that the code has been memorised.
7. If you want to program additional remotes. Please repeat step 5 on each additional remote within 5 seconds.
8. Please wait 10-20 seconds. Press a button on the newly programmed remote to test you have programmed in successfully.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



PROGRAMMING A REMOTE VIA AN EXISTING WORKING REMOTE

All remotes programmed using this method will share the same key configuration as the original remote used in this procedure.

1. Stand within 1-2 metres of the motor.
2. Press and hold buttons 1 and 2 (the 2 buttons closest to the LED light on the remote) for 6 seconds on your **working original remote**.
3. Release both buttons on the **original remote**.
4. Within 5 seconds, press and hold the button on the **new remote** that you wish to program.
5. Release the button on the **new remote** after 2-3 seconds.
6. Repeat steps 2 to 5 to program additional remotes
7. Please wait 10-20 seconds. Press a button on the newly programmed remote to test you have programmed in successfully.

ERASING MOTOR MEMORY

1. Switch off the power supply of the control unit where MR1 receiver is connected.
2. Press and hold the P1 key on the receiver
3. Continue holding this while you restore power to the receiver.
4. Once the LED light illuminates, release the P1 key

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

