
REMOTE PRO

PROGRAMMING INSTRUCTIONS



CODING TO AN ATA / B&D RECEIVER

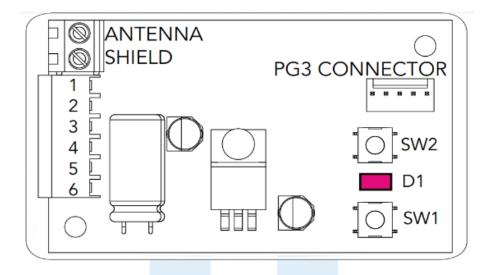

- 1. Press and hold the SW1 button on the receiver.
- 2. While holding the SW1 button, press and hold button number 1 on your new remote for 2 seconds.
- 3. Press and hold button number 1 again for 2 seconds.
- 4. Release the SW1 button and test your remote