REMOTE PRO


PROGRAMMING INSTRUCTIONS



STEEL-LINE BHT1 PRE-CODED INSTRUCTIONS

PROGRAMMING YOUR NEW PRE-CODED REMOTE TO YOUR OVERHEAD MOTOR

- 1. Remove the cover off the motor to expose the receiver.
- 2. Locate the receiver as per the image below.

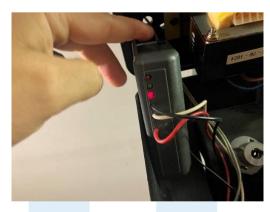

3. Open the small compartment on the left-hand side of the receiver as per the image below.



- 4. Press and hold the 'SW1' button the receiver shown above until the amber light comes on.
- 5. Within 3 seconds, press and hold the desired button on your new remote until the green light on the receiver turns on.
- 6. Wait 15 seconds for the receiver to time out (this will be indicated by the green light turning off and the red light turning on).
- 7. Test your remote.

