

REMOTE PRO



PROGRAMMING INSTRUCTIONS



BFT Q.BO KEYPAD


PROGRAM KEYPAD TO MOTOR

1. Press and hold the ON button on the keypad until the red led comes on solid on the keypad.
2. Press button 1 on the keypad four times and press the ON button and the red led on the keypad will begin flashing.

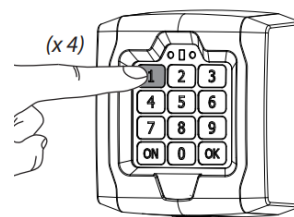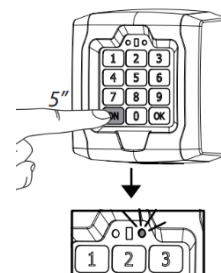

3. Complete pairing: for control units with a display like the image below, follow the steps below

You control board has a LCD display with 3 buttons

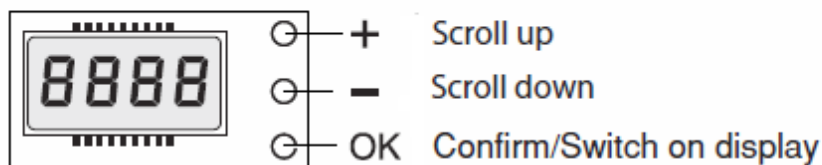

4. Press the OK button 4 times and the screen will display 'Paran'.
5. Press the middle button (-) twice and the screen will display 'Radio'.
6. Press the OK button twice and the screen will display 'Hidden Button'.
7. Press the ON button on the keypad once. If the screen on the motor displays OK followed by a number then your keypad has been successfully programmed.
8. Press the + and – buttons on the control board together 4 times to exit the programming mode.
9. Test your keypad by holding the ON button on the keypad for about a second until the yellow led flashes once quickly then enter 1111 and press OK on the keypad.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.




REMOTE PRO

PROGRAMMING INSTRUCTIONS




ENTERING A NEW PIN


1. Press and hold the ON button on the keypad until the red led comes on solid on the keypad.

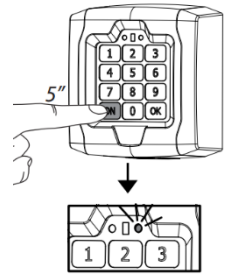


2. Press button 1 on the keypad four times and press the OK button and the red led will be on and yellow light will begin flashing.

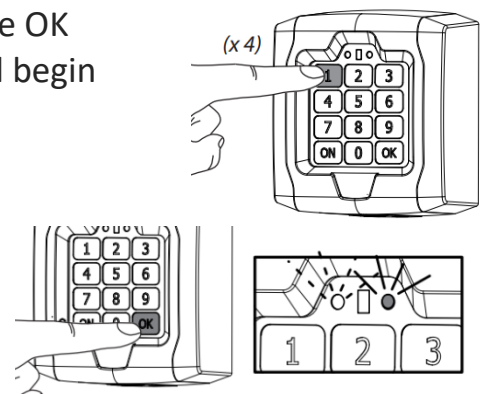

3. Enter a new 4-7 digit code and press OK.

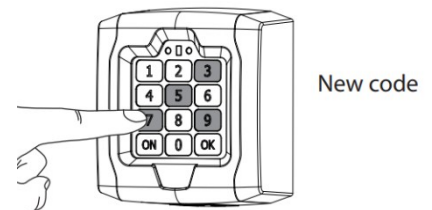

4. Enter the new 4-7 digit code again and press OK green led will turn on, indicating the code has been added.

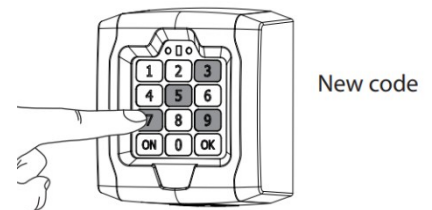

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



REMOTE PRO

PROGRAMMING INSTRUCTIONS



CHANGING THE SYSTEM PASSWORD

1. Activate programming mode: press and hold the on button for 5 seconds until the red led turns on.
2. Enter old password: input your current password and press the ok button. The green led will flash, and the red led will turn on.
3. Enter new password: input your desired new password and press the ok button. Both red and green LEDs will flash simultaneously.
4. Confirm new password: re-enter the new password. The green led will flash, indicating the password has been changed.

DELETING AN EXISTING CODE

5. Activate programming mode: press and hold the on button for 5 seconds until the red led turns on.
6. Enter code to delete: input the code you wish to delete and press the ok button. The green led will flash, and the red led will turn on.
7. Confirm deletion: re-enter the same code and press the ok button. The code will be deleted.

IMPORTANT NOTES

- Lockout feature: after three consecutive incorrect code entries, the keypad will lock out for 90 seconds. A subsequent incorrect entry will result in an immediate lockout.
- Code composition: codes should be between 4 to 7 digits and should not consist of repeating numbers (e.g., 2222, 3333).
- Battery indicator: if the red led remains on after entering the correct code, it indicates that the batteries are low and need replacement.

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

