


# REMOTE PRO

## PROGRAMMING INSTRUCTIONS



### B&D KEYPAD

Some garage motors have a plastic cover over the buttons. If yours does, remove it. Locate either the “MODE” or “CODE SET” button on the motor, as shown below. Follow the instructions based on which button your motor has.

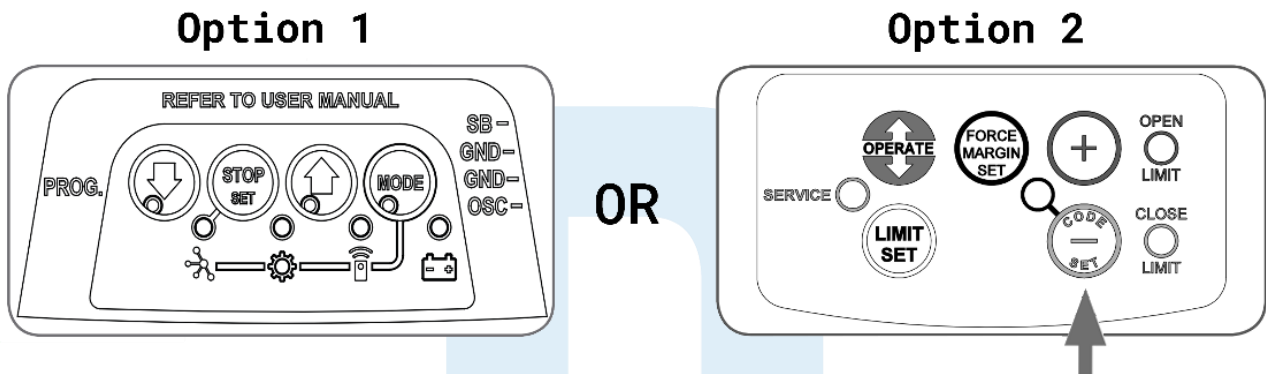

#### OPTION 1: MOTORS WITH A “MODE” BUTTON

1. Press and release the “MODE” button on the motor repeatedly until the LED on the transmitter lights up
2. Press and hold the blue down arrow button on the motor until Step 5
3. On the transmitter, press and hold button 1 for 2 seconds
4. Press and hold button 1 again for 2 seconds
5. Release the blue down arrow button on the motor
6. Press and release the “MODE” button on the motor

#### OPTION 2: MOTORS WITH A “CODE SET” BUTTON

1. Press and release the “CODE SET” button on the motor
2. Press and hold button 1 on the remote for 2 seconds
3. Press and hold button 1 again for 2 seconds
4. Test your remote

#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.



# REMOTE PRO

## PROGRAMMING INSTRUCTIONS

---



### CREATING YOUR OWN PIN

1. Press and hold the “FCN” button. The keypad will beep and flash to indicate that it is in learning mode. Release the button.
2. Enter in your new 4-digit user PIN code and press the “FCN” button.
3. Re-enter the same 4-digit user PIN code and press the “FCN” button.
4. The keypad will flash and beep to indicate that it is exiting learning mode.



#### WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

